

# Speedy Screen Instructions



CopQuest.com | 800-728-0974

The CopQuest Speedy Screen is designed to provide a barrier for crime scenes or other areas where limiting viewing access by the public is necessary. Our barrier is constructed from durable fabric that is UV resistant, water repellant and easily cleaned. The frame and cover sets up and takes down quickly.

If the Speedy Screen is used in windy conditions, the feet should be weighted down with sandbags or other heavy materials.

## Cleaning



The screen material can be cleaned by scrubbing with soap and water and hosing it down. Do not use bleach or harsh chemicals. Air-dry the screen fabric before repacking.

## Components

The barrier consists of 10 components: 1 fabric panel with hook-and-loop attachments, 2 base stand assemblies, 2 vertical supports, 2 horizontal tubes, 2 connecting tubes and carrying bag.

## Assembly:

1. Unfold Screen Panel and lay face-down on a flat surface. Take note that the reflective logo is positioned at the top of the screen.
2. Slide Horizontal Connector (A) over the end of Horizontal Runner (B). Slide through the upper channel at the top of the screen. Repeat this step and slide the second assembly through the lower channel at the bottom of the screen.
3. Slide the elbow of Vertical Support (C) over the Horizontal Runner (A) tube at the top of the screen. Slide the T-Connector over the Horizontal Runner (A) tube at the bottom of the screen. Repeat this step for the other side. Open up the side channel and wrap the fabric around the vertical tube and then re-fasten.
4. Slide the top of the Base Stand (D) into the bottom of the Vertical Support (C). Repeat for the other side. Now stand up the barrier. Assure the feet are at 90-degrees for a firm stance.

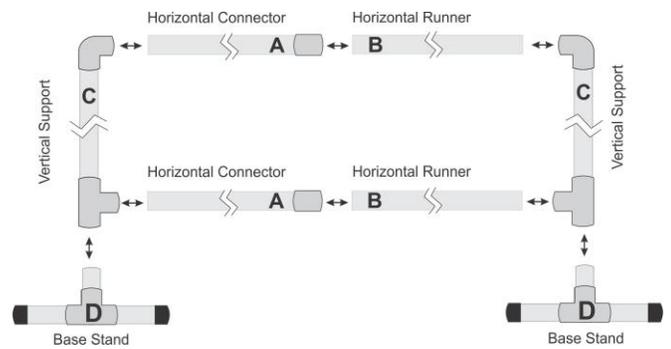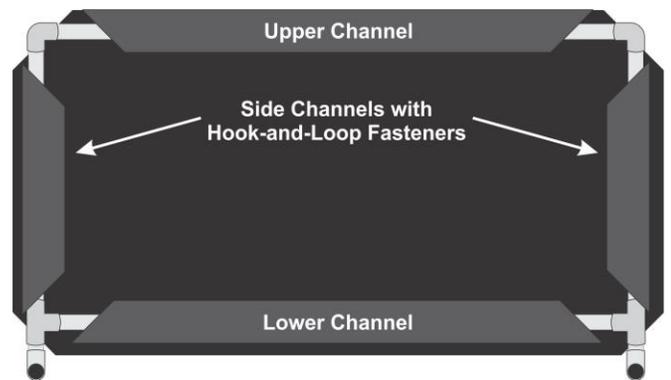

Each Speedy Screen has hook-and-loop fasteners on both ends to allow easy connection of additional screens.

SKU: 43-6970